

Edit a setting

1. Select **Utility** mode (UTIL lit in the MODE/STEP column).
2. Press **SHIFT**, then **UT** (MODE/STEP) to open the editor.
3. Press **UT** again to step to the next setting (wraps after 39).
4. Turn the **EDIT encoder** to change the value. It is saved automatically.

Read the setting number

- **A** MODE/STEP column: page
- **B** OCTAVE/PITCH column: group (row of the grid)
- **C** PATTERN/GATE column: item (column of the grid)
- **D** PARAM./VELOCITY column: the value (one LED or a brightness bar; shown grey on this sheet)

Page 1 — A1 lit Settings 1–16

1 VCF MIDI assignment 0-127 Mod-wheel amount to peak filters · 0 = off	2 VCF MIDI curve 0-3 0 Lin · 1 Log · 2 Exp · 3 S-curve	3 Bend-pad assignment 0-3 0 Off · 1 CC74 · 2 Aftertouch · 3 Mod	4 Bend-pad curve 0-3 0 Lin · 1 Log · 2 Exp · 3 S-curve
5 Dynamic mode 0-1 0 Off · 1 On	6 Dynamic curve 0-3 0 Lin · 1 Log · 2 Exp · 3 S-curve	7 Dynamic attack rate 0-127 Velocity → attack · 0 = no effect ... 127 = full	8 Dynamic decay + release 0-127 Release velocity → D + R · 0 = no effect ... 127 = full
9 VCA velocity amount 0-127 0 = no effect ... 127 = full	10 VCA velocity curve 0-3 0 Lin · 1 Log · 2 Exp · 3 S-curve	11 VCA CC74 amount 0-127 0 = no effect ... 127 = full	12 VCA CC74 curve 0-3 0 Lin · 1 Log · 2 Exp · 3 S-curve
13 VCA aftertouch amount 0-127 0 = no effect ... 127 = full	14 VCA aftertouch curve 0-3 0 Lin · 1 Log · 2 Exp · 3 S-curve	15 VCA mod-wheel amount 0-127 0 = no effect ... 127 = full	16 VCA mod-wheel curve 0-3 0 Lin · 1 Log · 2 Exp · 3 S-curve

Page 2 — A2 lit Settings 17–32

17 Pitch-wheel range 0-12 Semitones	18 Pedal assignment 0-3 0 Off · 1 Switch NO · 2 Switch NC · 3 Expression	19 LFO sync 0-1 0 Internal · 1 MIDI clock	20 LFO sync clock division 0-7 MIDI-clock divider
21 Expression → Peak 1 0-127 0 = no effect ... 127 = full	22 Expression → Peak 2 0-127 0 = no effect ... 127 = full	23 Expression → modulation 0-127 0 = no effect ... 127 = full	24 Expression → CC74 0-127 0 = no effect ... 127 = full
25 Expression → volume 0-127 0 = no effect ... 127 = full	26 Aftertouch → Peak 1 0-127 0 = no effect ... 127 = full	27 Aftertouch → Peak 2 0-127 0 = no effect ... 127 = full	28 MPE lower-zone channels 0-15 Member channels
29 MPE upper-zone channels 0-15 Member channels	30 MPE active 0-1 0 Off · 1 On	31 Main MIDI channel 1-16 Receive channel	32 CV input routing 0-3 0 Off · 1 Pitch 0-10 V · 2 Bend 0-5 V · 3 Bend 0-10 V

Page 3 — A3 lit Settings 33–39

33 External gate 0-1 0 Off · 1 On	34 Running Status 0-1 0 Off · 1 On	35 Active Sensing 0-1 0 Off · 1 On	36 Key sync 0-1 0 Off · 1 On
37 Aftertouch threshold 0-127 Minimum aftertouch · 0 = off	38 MIDI Clock output 0-1 0 Off · 1 On	39 Bend-pad auto-nulling 0-1 At start-up · 0 Off · 1 On	

LEDs in every column run top to bottom as LED 1–4. Curves: Lin = linear, Log = logarithmic, Exp = exponential, S = S-curve. Setting 8 sets Dynamic Decay (CC94) and Release (CC95) together. Source: LARYNX User Manual, chapter MIDI and system settings.